

U ***SER MANUAL***

K-Series

Fork Positioner/Sideshifter

Original Instructions

Number 6055911-R9 EN



cascade[®]
corporation

Cascade is a Registered Trademark of Cascade Corporation

CONTENTS


	Page
INTRODUCTION	<i>i</i>
Special Definitions	1
OPERATION	
Safety Rules	2
Industrial Lift Trucks	2
Handling Loads	3
Sideshifter Operation	3
Safe Operation and Maintenance	4
TRUCK REQUIREMENTS	5
HYDRAULIC SUPPLY	6
INSTALLATION	7
PERIODIC MAINTENANCE	
Daily	14
1000-Hour Maintenance	14
2000-Hour Maintenance	15
PARTS	
Recommended Spare Parts	16
Publications	16

INTRODUCTION

This user manual is for the Cascade K-Series Fork Positioner/Sideshifter. Contents include an Operator Guide, Installation Instructions, Periodic Maintenance and Parts Manual.

NOTE: All specifications are shown in US and (Metric) units where applicable. All fasteners have a torque value range of $\pm 10\%$ of stated value.

IMPORTANT: K-Series Fork Positioner/Sideshifter is metric. Supply fittings adapted as required for application.

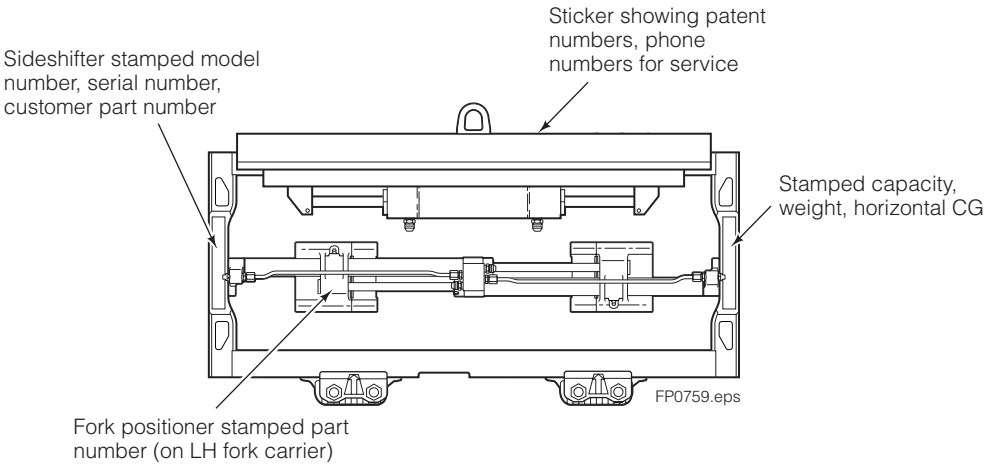

Special Definitions

The statements shown appear throughout this Manual where special emphasis is required. Read all WARNINGS and CAUTIONS before proceeding with any work. Statements labeled IMPORTANT and NOTE are provided as additional information of special significance or to make the job easier.



WARNING – A statement preceded by WARNING is information that should be acted upon to prevent **bodily injury**. A WARNING is always inside a ruled box.

CAUTION – A statement preceded by CAUTION is information that should be acted upon to prevent machine damage.

IMPORTANT – A statement preceded by IMPORTANT is information that possesses special significance.

NOTE – A statement preceded by NOTE is information that is handy to know and may make the job easier.



WARNING: Rated capacity of the truck/attachment combination is a responsibility of the original truck manufacturer and may be less than shown on the attachment nameplate. Consult the truck nameplate.

WARNING: Do not operate this attachment unless you are a trained and authorized lift truck driver.


WARNING: For forks longer than 96 in. (2438 mm) or load centers exceeding 30 in. (760 mm), consult Cascade.

OPERATION

This Section contains operating instructions for the Cascade K-Series Fork Positioner/Sideshifter. It will help you avoid common errors which often cause damage to the equipment or product being handled.

This information is intended to simplify operator understanding about effective and safe Fork Positioner/Sideshifter use and operation. Read this information thoroughly before operating the attachment. Be sure you know and understand all operating procedures and safety precautions. If you have any questions, or don't understand a procedure, ask your supervisor.

Emphasize Safety! Most accidents are caused by operator carelessness or misjudgment. You must watch for poorly maintained equipment and hazardous situations and correct them.

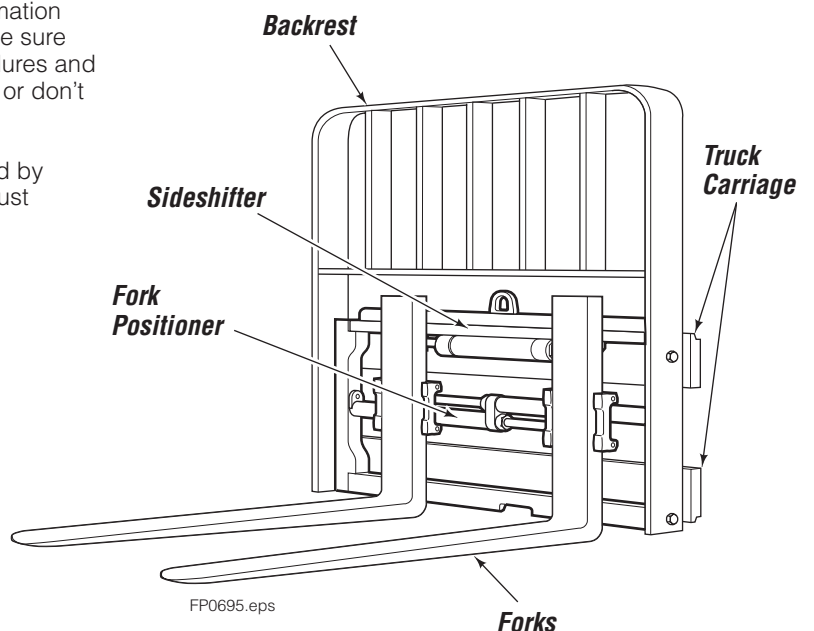

OPERATION

Safety Rules – Industrial Lift Trucks

No riders






No reaching through mast




No standing under load



GA0047.eps

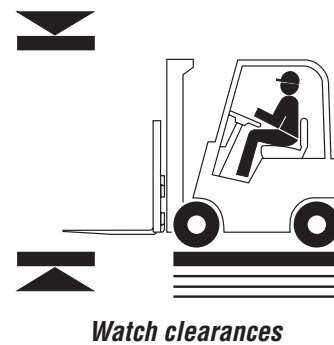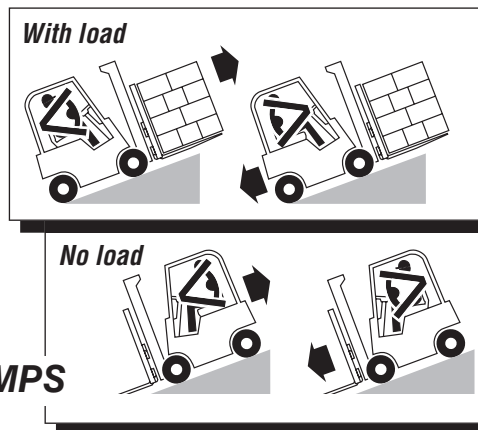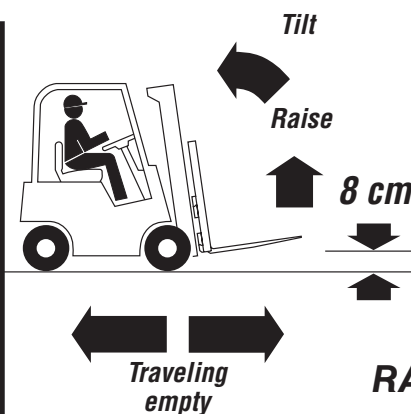


GA0048.eps

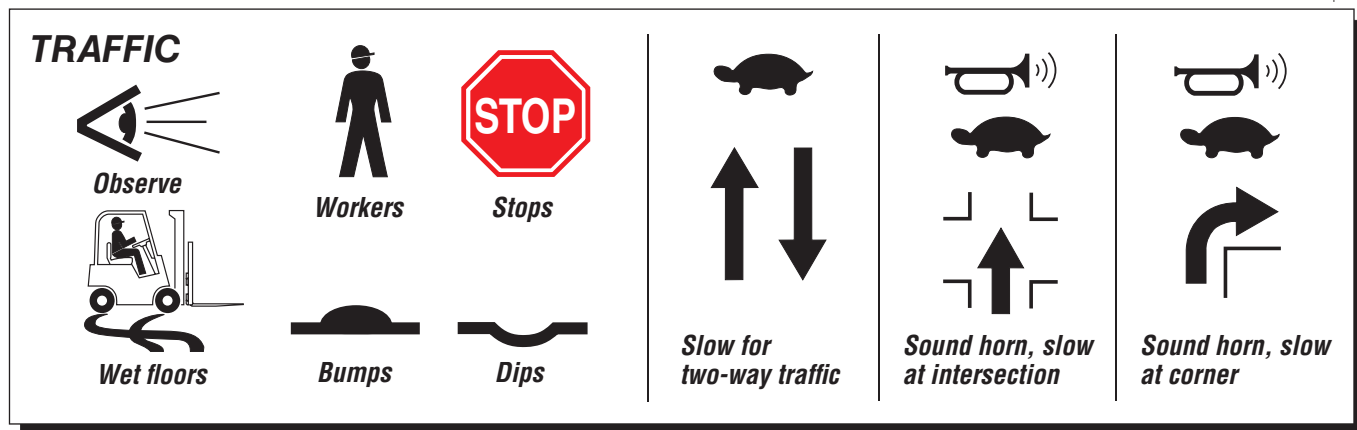


OPERATION

Safety Rules – Handling Loads

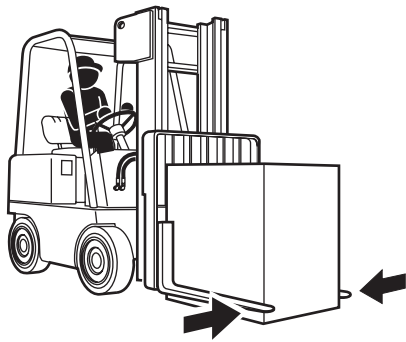


CAUTION: Do not put side loads on forks.

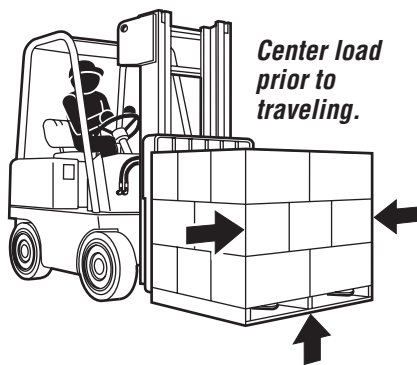


Center load prior to traveling.

Raise load prior to sideshifting.


Limit sideshifting with raised load.

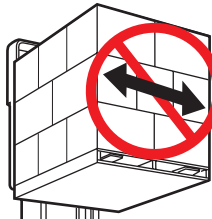

Limit truck movement with raised load.

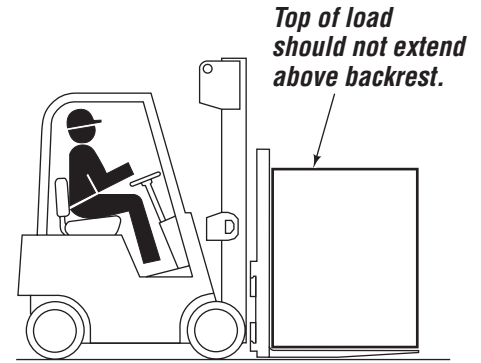

Top of load should not extend above backrest.

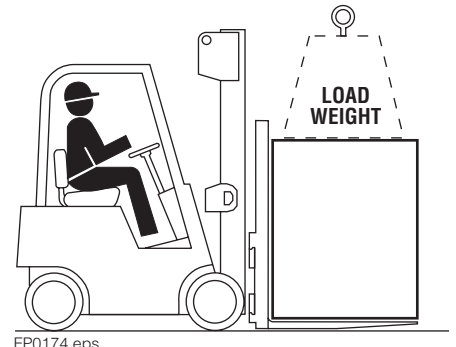


FP0174.eps

Load weight must not exceed combined truck/attachment capacity (see truck nameplate).

Total fork capacity (LH + RH fork) must be greater than load weight. Check capacity stamp on forks.

Fork Positioner/Sideshifter Operation


AUXILIARY VALVE FUNCTIONS

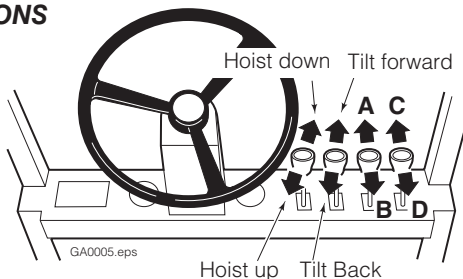

GA0005.eps

SIDESHIFTING / FORK POSITIONING

- A Sideshift Left
- B Sideshift Right
- C Open Forks
- D Close forks

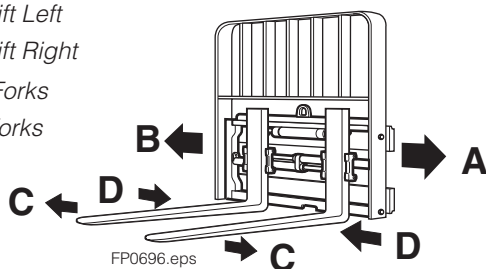


FP0696.eps



WARNING: Truck control handle and attachment function activation shown here conforms to ISO 3691 recommended practices. Failure to follow these practices may lead to serious bodily injury or property damage. End user, dealer and OEMs should review any deviation from the practices for safe operation.

SIDESHIFTING / FORK POSITIONING WITH SOLENOID VALVE

- A Sideshift Left
- A Open Forks (press knob button)
- B Sideshift Right
- B Close Forks (press knob button)

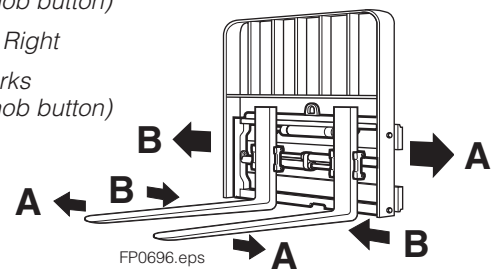

FP0696.eps

SAFE OPERATION AND MAINTENANCE

Industrial Trucks and Attachments



WARNING: When operating and maintaining industrial trucks equipped with attachments, you should pay particular attention to the following information. You should be familiar with this information for truck and attachment operation. **Ask your employer for complete operation information.**

General Requirement

Modifications and additions which affect capacity and safe operation shall not be performed by the customer or user without manufacturers prior written approval. Capacity, operation and maintenance instruction plates, tags or decals shall be changed accordingly.

If the truck is equipped with front-end attachments other than factory installed attachments, the user shall request that the truck be marked to identify the attachments and show the appropriate weight of the truck and attachment combination at maximum elevation with load laterally centered.

The user shall see that all nameplates and markings are in place and maintained in a legible condition.

Safety Guards

If the type of load presents a hazard, the user shall equip fork trucks with a vertical load backrest extension in accordance with the following.

All new powered industrial trucks acquired and used by an employer after February 15, 1972 shall meet the design and construction requirements for powered industrial trucks established in the "American National Standard for Powered Industrial Trucks, Part II, ANSI B56.1", except for vehicles intended primarily for earth moving or over-the-road hauling.

Operator Training

Only trained and authorized operators shall be permitted to operate a powered industrial truck. Methods shall be devised to train operators in the safe operation of powered industrial trucks.

Truck Operations

Trucks shall not be driven up to anyone standing in front of a bench or other fixed object.

No person shall be allowed to stand or pass under the elevated portion of any truck, whether loaded or empty.

Unauthorized personnel shall not be permitted to ride on powered industrial trucks. A safe place to ride shall be provided where riding of trucks is authorized.

The employer shall prohibit arms or legs from being placed between the uprights of the mast or outside the running lines of the truck.

When a powered industrial truck is left unattended, load engaging means shall be fully lowered, controls shall be neutralized, power shall be shut off and brakes set. Wheels shall be blocked if the truck is parked on an incline.

A powered industrial truck is unattended when the operator is 7 meter or more away from the vehicle which remains in his view, or whenever the operator leaves the vehicle and it is not in his view.

When the operator of an industrial truck is dismounted and within 7 meter of the truck still in his view, the load engaging means shall be fully lowered, controls neutralized and the brakes set to prevent movement.

A safe distance shall be maintained from the edge of ramps or platforms while on any elevated dock or platform or freight car. Trucks shall not be used for opening or closing freight doors.

A load backrest extension shall be used whenever necessary to minimize the possibility of the load or part of it from falling rearward.

Traveling

The driver shall be required to slow down and sound the horn at cross isles and other locations where vision is obstructed. If the load being carried obstructs forward view, the driver shall be required to travel with the load trailing.

When ascending or descending grades in excess of 10 percent, loaded trucks shall be driven with the load upgrade.

On all grades the load and load engaging means shall be tilted back if applicable, and raised only as far as necessary to clear the road surface.

Loading

Only stable or safely arranged loads shall be handled. Caution shall be exercised when handling off-center loads which cannot be centered.

Only loads within the rated capacity of the truck shall be handled.

The long or high (including multiple-tiered) loads which may affect capacity shall be adjusted.

Trucks equipped with attachments shall be operated as partially loaded trucks when not handling a load.

A load engaging means shall be placed under the load as far as possible; the mast shall be carefully tilted backward to stabilize the load.

Extreme care shall be used when tilting the load forward or backward, particularly when high tiering. Tilting forward with load engaging means elevated shall be prohibited except to pick up a load. An elevated load shall not be tilted forward except when the load is in a deposit position over a rack or stack. When stacking or tiering, only enough backward tilt to stabilize the load shall be used.

Operation of the Truck

If at any time a powered industrial truck is found to be in need of repair, defective, or in any way unsafe, the truck shall be taken out of service until it has been restored to safe operating condition.

Maintenance of Industrial Trucks

Any power-operated industrial truck not in safe operating condition shall be removed from service. All repairs shall be made by authorized personnel.

All parts of any such industrial truck requiring replacement shall be replaced only by parts equivalent as to safety with those used in the original design.

Industrial trucks shall not be altered so that the relative positions of the various parts are different from what they were when originally received from the manufacturer, nor shall they be altered either by the addition of extra parts not provided by the manufacturer or by the elimination of any parts. Additional counter-weighting of fork trucks shall not be done unless approved by the truck manufacturer.

Industrial trucks shall be examined before being placed in service and shall not be placed in service if the examination shows any condition adversely affecting the safety of the vehicle. Such examinations shall be made at least daily. When industrial trucks are used on a round-the-clock basis, they shall be examined after each shift. Defects when found shall be immediately reported and corrected.

TRUCK REQUIREMENTS


Truck Relief Setting

152 bar Recommended
241 bar Maximum

Truck Flow Volume ^①

	Min. ^②	Recommended	Max. ^③
55K, 65K	4 L/min.	7.5 L/min.	12 L/min.
100K, 120K 150K, 165K	4 L/min.	16L/min.	20 L/min.

- ① Cascade K-Series Fork Positioner/Sideshifters are compatible with SAE 10W petroleum base hydraulic fluid meeting Mil. Spec. MIL-0-5606 or MIL-0-2104B. Use of synthetic or aqueous base hydraulic fluid is not recommended. If fire resistant hydraulic fluid is required, special seals must be used. Contact Cascade.
- ② Flow less than recommended will result in slow fork positioning speed.
- ③ Flow greater than maximum can result in excessive heating, reduced system performance and short hydraulic system life.

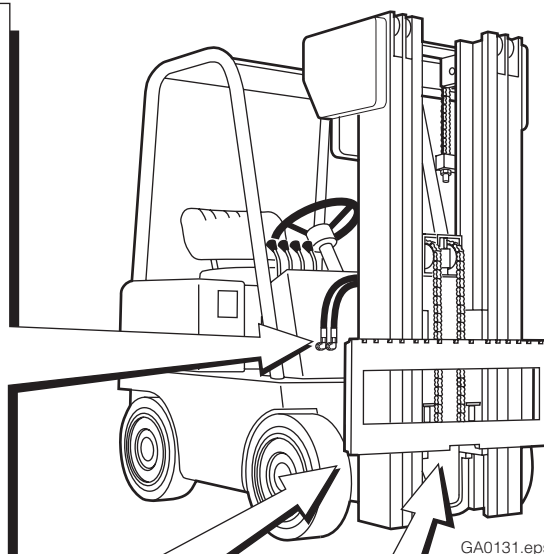


Carriage Mount Dimension (A) ISO

	Minimum	Maximum
Class II	380.0 mm	381.0 mm
Class III	474.5 mm	476.0 mm
Class IV	595.5 mm	597.0 mm

Carriage – Clean and inspect carriage bars. Make sure that bars are parallel and that ends are flush. Grind smooth any protruding welds that may affect Sideshifter lower bearings. Repair any damaged notches.

Auxiliary Valve Functions


Check for compliance with ISO standards:

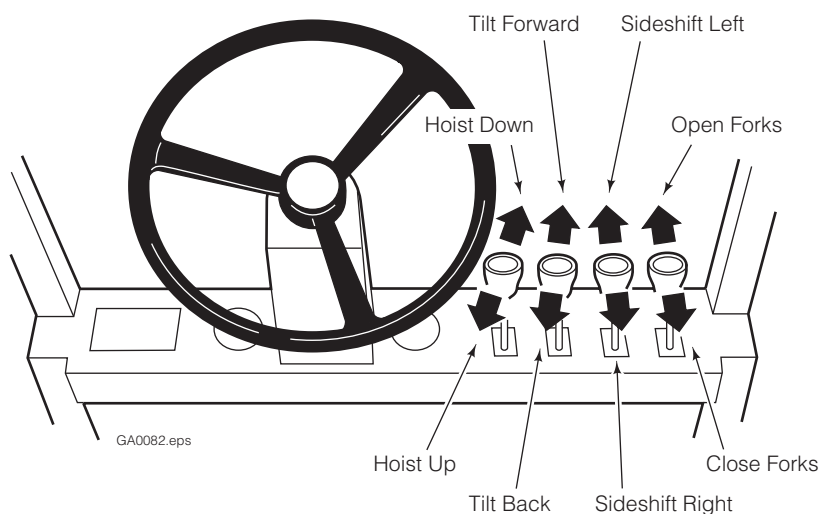

Fork Positioning function: No. 3 hose/No. 4 fittings with 4 mm minimum I.D.

Sideshifting function: No. 4 hose/No. 6 fittings with 5 mm minimum I.D.

Refer to *Cascade Hose & Cable Reel Selection Guide*, Part No. 212199 to select the correct hose reel for the mast and truck.

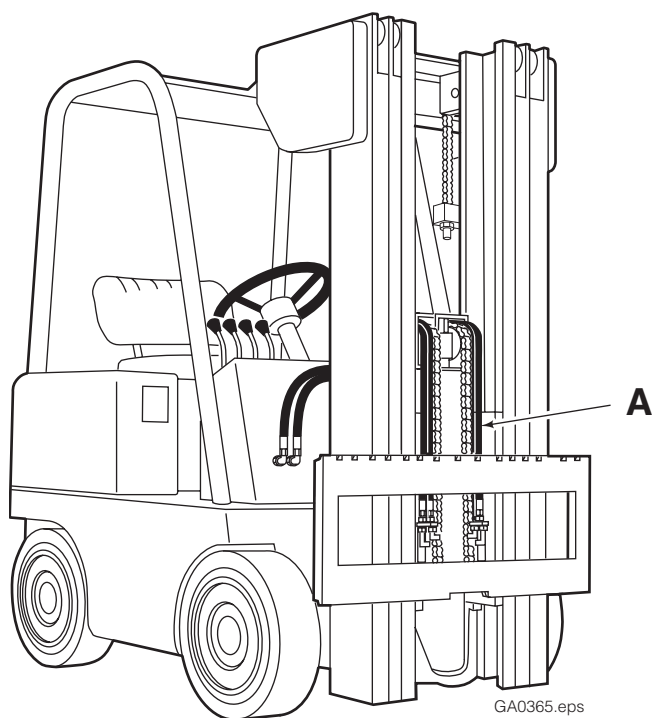


Fork Positioning / Sideshifting

A Mast Double Internal Reeving

Solenoid Adaption


A Mast Single Internal Reeving with RF Hydraulic Control

1 Attach overhead hoist


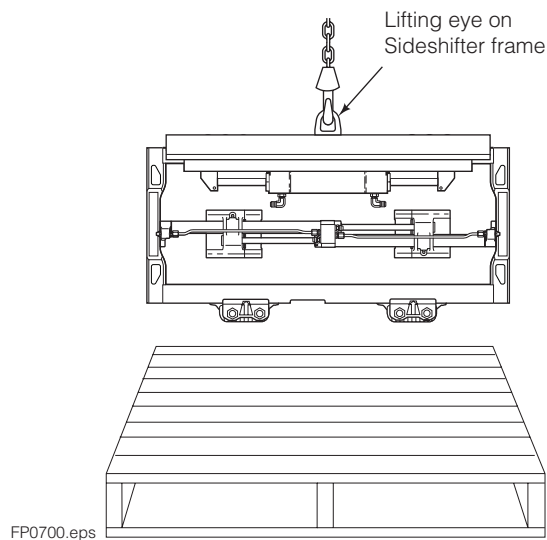


WARNING: Check the attachment weight (located on the nameplate) to make sure the overhead hoist and chains or straps are at least the rated capacity of the attachment.


2 Remove bolt-on lower hooks

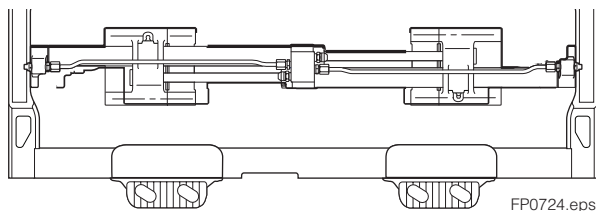

Two Capscrew Hooks

 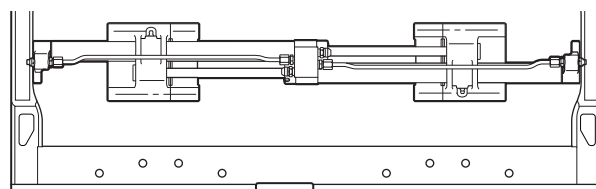


Wide Lower Hook

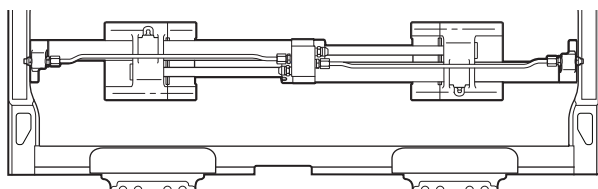

Four Capscrew Hooks •


* No longer in production.

3 Mount unit on truck carriage

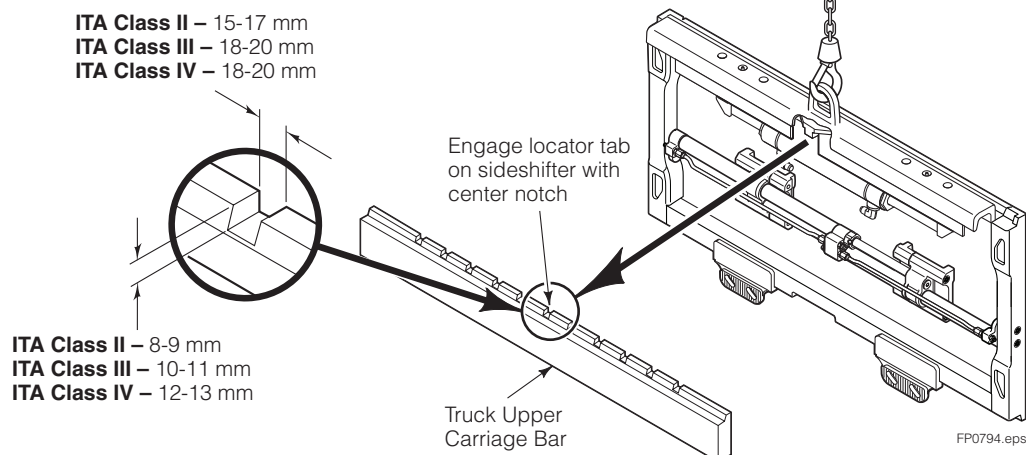


4 Install lower hooks

BOLT-ON HOOKS – Two Capscrew

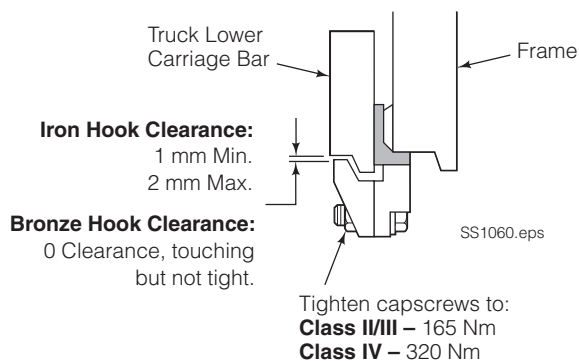


WIDE LOWER HOOK

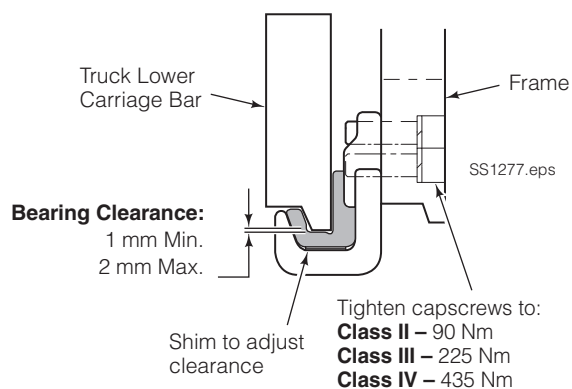


NOTE: If frame is equipped with a hydraulic component guard, remove the guard to access shims located on the lower fork bar.

QUICK-DISCONNECT HOOKS

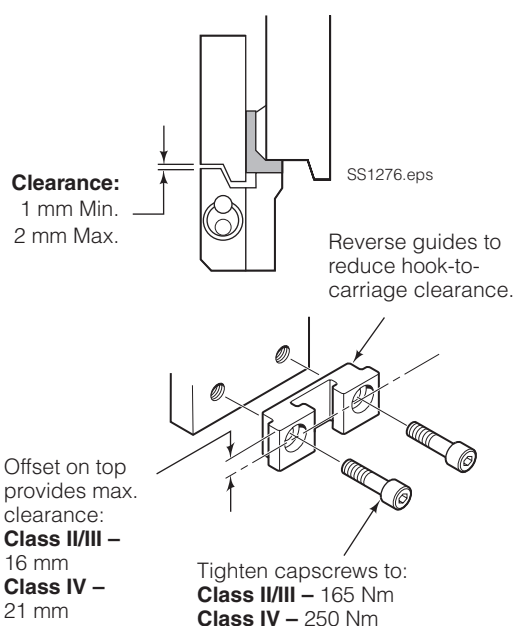


BOLT-ON HOOKS – Four Capscrew

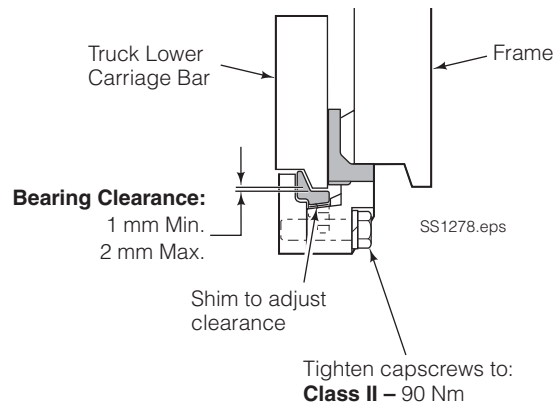

NOTE: If frame is equipped with a hydraulic component guard, remove the guard to access shims located on the lower fork bar.


5 Flush supply hoses

- A** Connect supply hoses to supply terminals and connect together using a union fitting as shown.
- B** Operate auxiliary valve for 30 sec.
- C** Remove union fitting

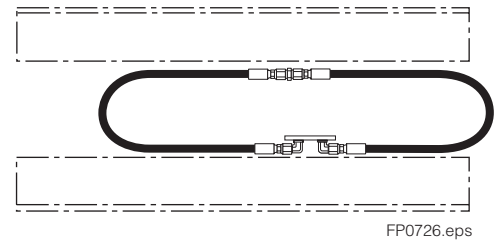

6 Install hoses



CAUTION: Allow for 100 mm movement in each direction for sideshifting ('rolling' hose arrangement recommended).

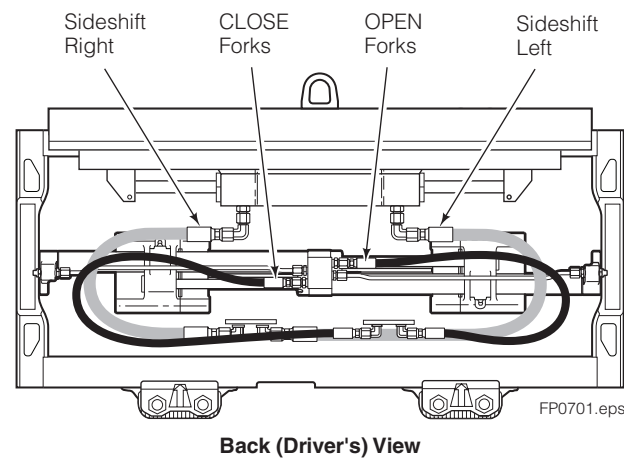

7 Remove fork locking pins



WARNING: Remove locking pins from forks. Make sure that forks slide freely on carriage bars.

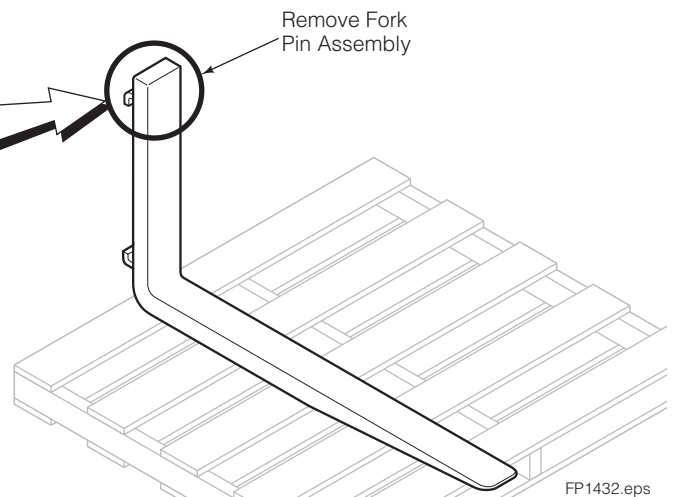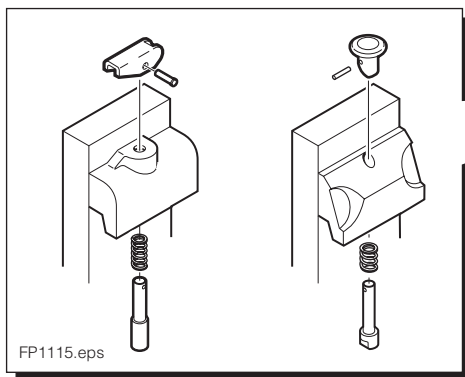

8 Install forks (55K & 65K)








- A** Remove capscrews and fork carrier inner retainer sections.
- B** Install forks using a pallet or blocks. Keep feet clear of forks.
- C** Reinstall fork carrier inner retainer sections and tighten capscrews to 35 Nm.

NOTE: See illustration below to position inner retainers for various fork widths.

IMPORTANT: Do not lube the fork carrier grease fittings during initial installation. See Periodic Maintenance for lube schedule.



WARNING: For forks longer than 2438 mm, consult Cascade.

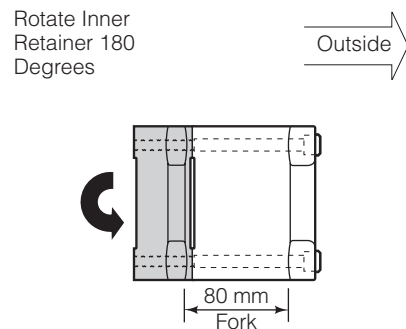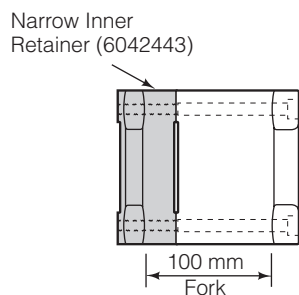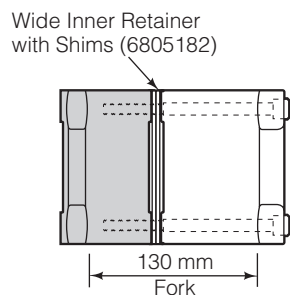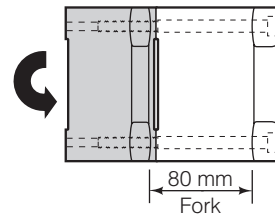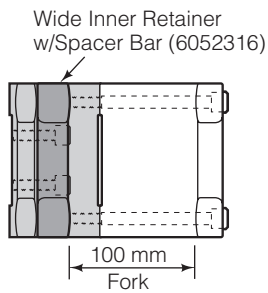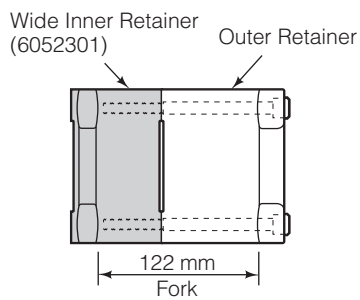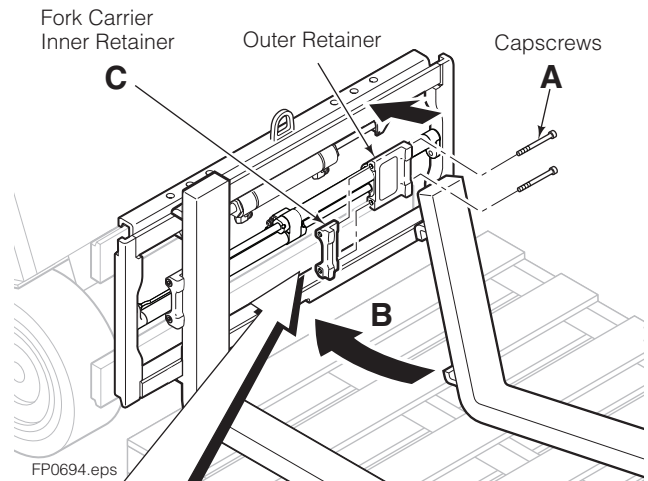

FORK CARRIER CONFIGURATIONS RH Front Views

NOTE: Recommended gap between sides of fork and fork retainer is 2-4 mm.

FP1543.eps

9 Install forks (100K, 120K, 150K & 165K)

- A** Remove capscrews and fork carrier inner retainer sections.
- B** Install forks using a pallet or blocks. Keep feet clear of forks.
- C** Reinstall fork carrier inner retainer sections and tighten capscrews to 65 Nm.

NOTE: See illustration below to position inner retainers for various fork widths.



IMPORTANT: Do not lube the fork carrier grease fittings during initial installation. See Periodic Maintenance for lube schedule.



WARNING: For long forks, consult Cascade.


100K – Forks over 2438 mm

120K/150K – Forks over 1828 mm

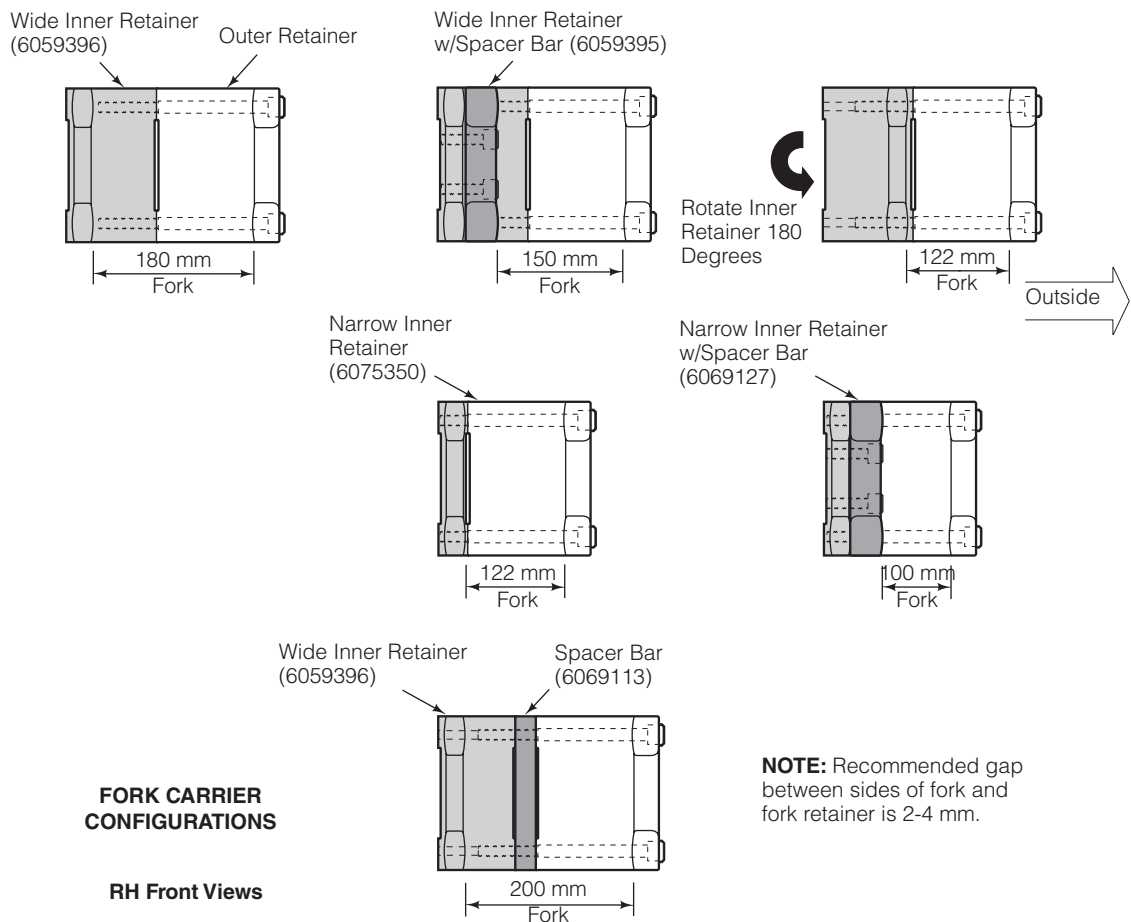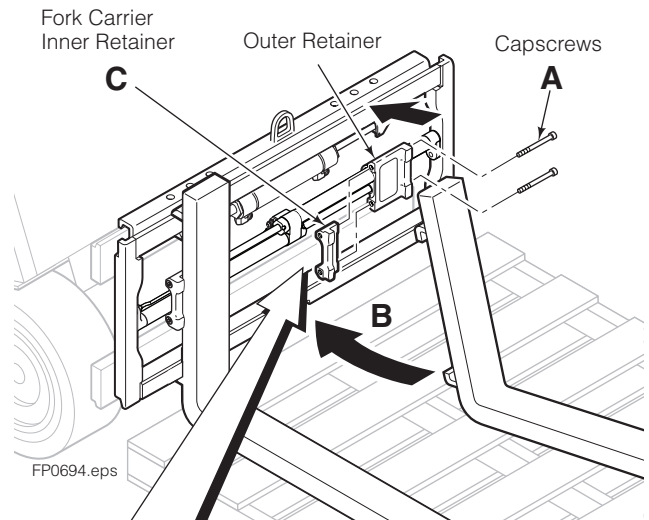

FP1213.eps

10 Install backrest

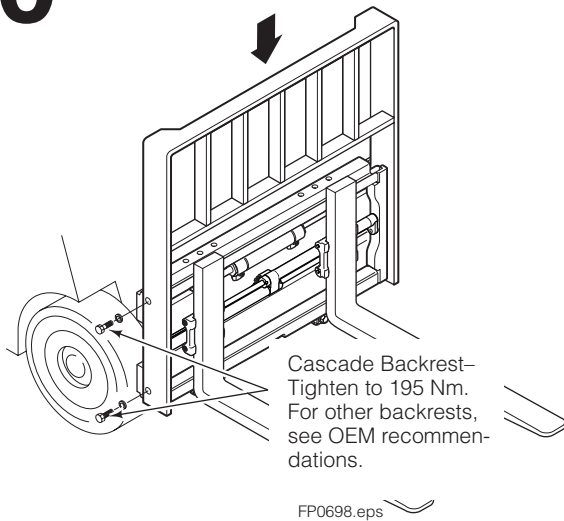

11 Lubrication

Fork Positioner/Sideshifter is prelubed at the Factory and requires no lubrication for installation. Use graphite dry lube for fork bars as required ('Slip Plate Aerosol', 'GraphoKote' or equivalent).

After use, lubricate fork positioner and sideshifter as described in Periodic Maintenance Section in this Manual.

12 Cycle Fork Positioner functions


- Open and close forks several times. Sideshift (if equipped) left and right. Check for smoothness and equal movement.
- Check for operation in accordance with ISO standards.
- Check for leaks at fittings, valve, cylinders.
- Check that rolling hoses supplying fork position are not pinched.




WARNING: Truck control handle and attachment function activation shown here conforms to ISO 3691 recommended practices. Failure to follow these practices may lead to serious bodily injury or property damage. End user, dealer and OEMs should review any deviation from the practices for safe operation.

SIDESHIFTING / FORK POSITIONING WITH SOLENOID VALVE

- A** Sideshift Left
- A** Open Forks
(press knob button)
- B** Sideshift Right
- B** Close Forks
(press knob button)

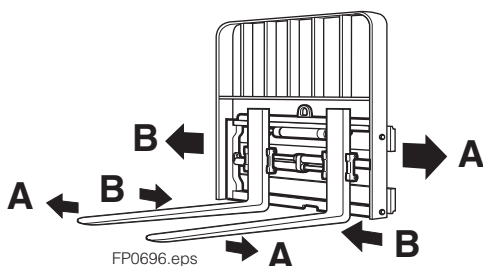


AUXILIARY VALVE FUNCTIONS

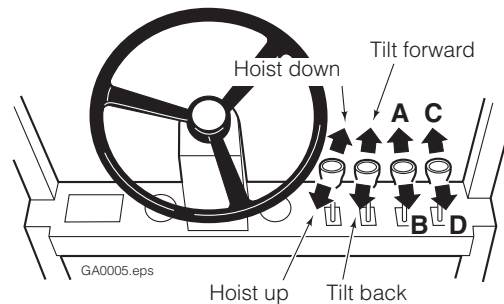

SIDESHIFTING / FORK POSITIONING


- A** Sideshift Left
- B** Sideshift Right
- C** Open Forks
- D** Close Forks

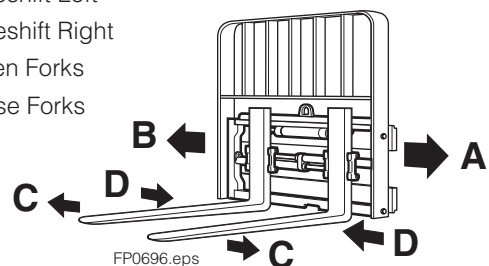

13 Adjust forks for equal movement (if required)

NOTE: Attachment is Factory-adjusted for equal fork movement when operated at recommended pressure and flow rate.


- A** Locate flow restrictors at each end. Loosen jam nuts and screw both flow restrictors in until they bottom. Screw each restrictor out (CCW) three (3) turns.
- B** Open forks fully, then close. Look for unequal fork movement.
- C** On faster fork (one that bottoms first), screw flow restrictor in (CW) 1/2 turn.
- D** Repeat Steps B and C until fork movement is equal. Tighten jam nuts.

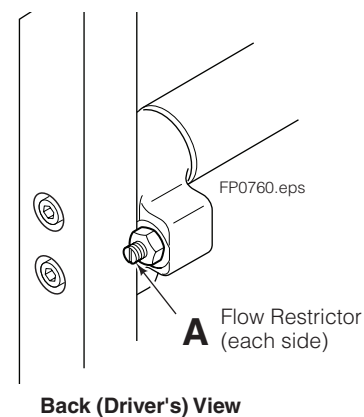

14 Inspect fork hooks, carriage bar clearance

NOTE: Use go/no-go Wear Gauge Part No. 209560 (Class II), 209561 (Class III) or 6104118 (Class IV).

- A** Inspect the fork lower hooks and carriage bar. If the gauge fits between the carriage bar and lower hook, repair or replacement is needed.
- B** Inspect the upper carriage bar. If the gauge arrow touches the carriage bar, repair or replacement is needed.
- C** Inspect the fork upper hooks. If the gauge arrow touches the hook, repair or replacement is needed.

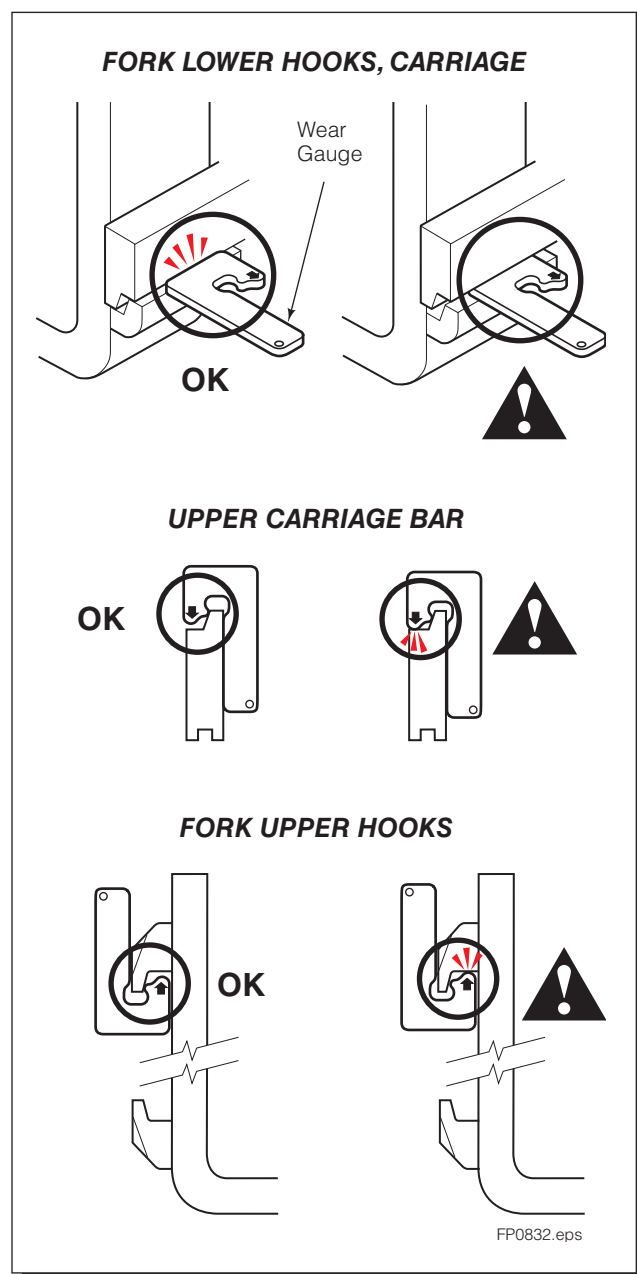

Daily

Check items shown each day. Report problems to your supervisor. See Service Manual for troubleshooting, maintenance and repair procedures.

1000-Hour

Every time the lift truck is serviced or every 1000 hours of truck operation, whichever comes first, complete the following maintenance procedures:

- Check for loose or missing capscrews, worn or damaged hoses, and hydraulic leaks.
- Inspect sideshifter lower hooks for wear and proper clearance. Adjust if necessary, refer to Installation, Step 4. Tighten lower hook capscrews to:

Two Capscrew Hooks

Class II/III – 165 Nm

Class IV – 320 Nm

Wide Lower Hook and Four Capscrew Hooks

Class II – 90 Nm



Class III – 225 Nm

Class IV – 435 Nm

- Tighten fork positioner mounting flange capscrews:
55K, 65K – 65 Nm
100K, 120K, 150K, 165K – 165 Nm
- Tighten fork carrier capscrews:
55K, 65K – 35 Nm
100K, 120K, 150K, 165K – 65 Nm
- Tighten fork positioner cylinder rod anchor plugs:
55K, 65K – 65 Nm
100K, 120K, 150K, 165K – 135 Nm
- Tighten backrest capscrews (Cascade) to 195 Nm.
- Apply general purpose lithium-based chassis grease to the sideshifter upper bearing grease fittings and sideshifter lower bearings. Apply a single pump of grease for the fork carrier grease fittings.
- Inspect fork carriers for looseness on bearing tubes, and cylinder rod anchors for excessive end play (see Service Manual for repair procedures). **NOTE:** Cylinder rod anchors operate with a loose clearance.
- Inspect Sideshifter upper and lower bearings for wear. If any bearing is worn to less than 2.5 mm thickness replace the entire bearing set (see Service Manual for repair procedures).
- **Long Forks** – For forks longer than 2438 mm, apply graphite dry-lube to fork carriage bars as required (Slip Plate Aerosol, Graphokote or equivalent).



WARNING: After completing any service procedure, always test the Fork Positioner/ Sideshifter through five complete cycles to make sure the attachment operates correctly before returning it to the job.

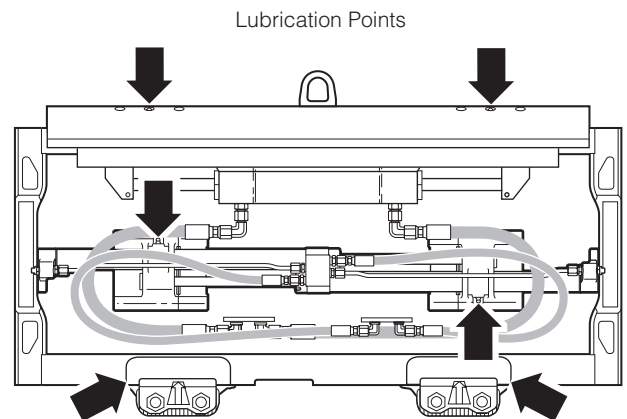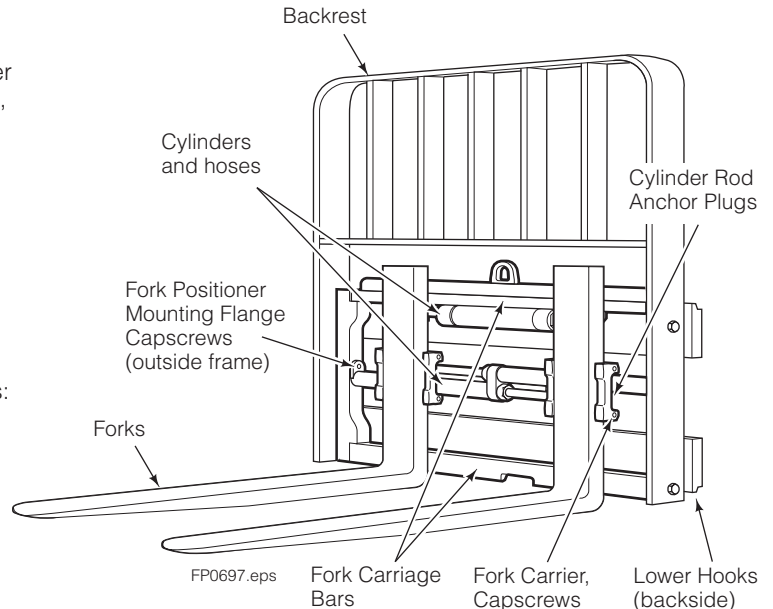

Back (Driver's) View

2000-Hour

After 2000 hours of truck operation, in addition to the Daily and 1000-Hour Maintenance, forks in use shall be inspected at intervals of not more than 12 months (for single shift operations) or whenever any defect or permanent deformation is detected. Severe applications will require more frequent inspection.

Fork inspection shall be carried out by trained personnel to detect any damage that might impair safe use. Any fork that is defective shall be removed from service. Reference ANSI B56.1-2005.

Inspect for the following defects:


- Surface cracks
- Straightness of blade and shank
- Fork angle
- Difference in height of fork tips
- Positioning lock
- Wear on fork blade and shank
- Wear on fork hooks
- Legibility of marking

NOTE: Fork Safety Kit 3014162 contains wear calipers, inspection sheets and safety poster. Also available is fork hook & carriage wear gauge 209560 (Class II), 209561 (Class III) and 6104118 (Class IV).

Recommended Spare Parts

55K PART NO.	65K PART NO.	100K PART NO.	120K,150K, 165K PART NO.	DESCRIPTION	UNITS SERVICED		
					1-5	6-19	20-50
					QTY.	QTY.	QTY.
FORK POSITIONER							
6055389	6055389	6081752	6081752	Cylinder Service Kit	0	4	6
6055390	6055390	6081751	6081751	Bearing Service Kit–Composite	1	2	4
6055391	6055391	6081749	6081749	Bearing Service Kit–Bronze	1	2	4
6039245	6039245	6059383	6059383	Mounting Shims	4	6	8
SIDESHIFTER							
228782 ♦	6051249	6051249	6079936	Upper Bearing–Composite	8	16	32
6000616 ♦	6052405	6052405	6082297	Upper Bearing–Bronze	4	8	16
6000914 ♦	6057162	6057162	6057162	Lower Bearing–Composite	6	12	24
225570 ♦	6058041	6058041	6058041	Lower Bearing–Bronze	4	8	16
6827696	6878699	6878699	6898535	Lower Bearing ▲ (WLH)	4	8	16
■	■	■	—	Lower Hook ▲ (WLH)	2	8	16
204186	204186	204186	6083157	Lower Hook	0	2	4
6818778	—	—	—	Lower Hook ●	0	2	4
6818788	—	—	—	Lower Hook Bearing–Bronze ●	4	8	16
6818771	—	—	—	Lower Hook Bearing Shim ●	6	12	24
681473	—	—	—	Lockwasher, M12 ●	0	8	16
678991	—	—	—	Lockwasher, M12 ▲ (WLH)	0	8	16
—	678992	678992	—	Lockwasher, M16 ▲ (WLH)	0	8	16
—	—	—	681469	Lockwasher, M20 ▲ (WLH)	0	8	16
206174	—	—	—	Capscrew, M12 x 45 ●	0	8	16
752903	752903	752903	—	Capscrew, M16 x 45	0	4	8
—	—	—	768580	Capscrew, M20 x 60	0	4	8
766929	—	—	—	Capscrew, M12 x 40 ▲ (WLH)	8	12	16
—	767810	767810	—	Capscrew, M16 x 45 ▲ (WLH)	8	12	16
—	—	—	769582	Capscrew, M20 x 50 ▲ (WLH)	8	12	16
678990	678990	678990	—	Nut, M16	0	4	8
—	—	—	783800	Nut, M20	0	4	8
667225	667225	667225	215419	Washer	0	4	8
■	■	■	■	Cylinder Assembly	0	0	1
219868	219868	6091229	6091229	Cylinder Service Kit	1	2	4

- ♦ Match the bearing being replaced.
- Refer to part number stamped on part or supply serial number stamped on sideshifter frame when purchasing parts.
- Four Capscrew Hook applications.
- ▲ Wide Lower Hook (WLH) applications.

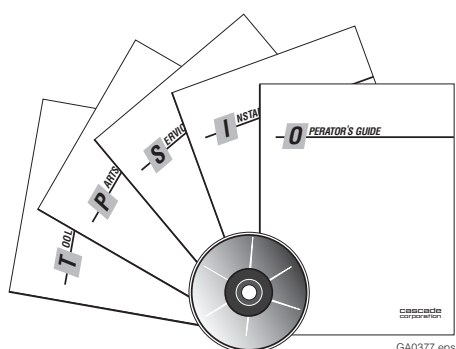

Publications

PART NO.	DESCRIPTION
6045671	User Manual
6053927	Service Manual
679929	Tool Catalog

BLANK

- (EN)** **Do you have questions you need answered right now?**
Call your nearest Cascade Service Department.
Visit us online at www.cascorp.com
- (NL)** **Zijn er vragen waarop u direct een antwoord nodig hebt?**
Neem dan contact op met uw dichtstbijzijnde serviceafdeling van Cascade. Of ga naar www.cascorp.com
- (DE)** **Haben Sie Fragen, für die Sie sofort eine Antwort benötigen?**
Wenden Sie sich an Ihren nächsten Cascade-Kundendienst.
Besuchen Sie uns online: www.cascorp.com
- (FR)** **En cas de questions urgentes,**
contacter le service d'entretien Cascade le plus proche.
Visiter le site Web www.cascorp.com.
- (IT)** **Per domande urgenti contattare**
l'Ufficio Assistenza Cascade più vicino.
Visitate il nostro sito all'indirizzo www.cascorp.com
- (ES)** **¿Tiene alguna consulta que deba ser respondida de inmediato?** Llame por teléfono al servicio técnico de Cascade más cercano. Visítenos en www.cascorp.com
- (CS)** **Máte nějaké dotazy, na které nyní potřebujete odpověď?**
Zavolejte na nejbližší servisní oddělení Cascade. Navštivte naši webovou stránku www.cascorp.com
- (FI)** **Tarvitsetko heti vastauksen kysymykseesi?**
Ota yhteys lähimpään Cascade-huoltoon.
Käy Internet-sivustollamme www.cascorp.com
- (HU)** **Van olyan kérdése, amelyre most azonnal választ vár?**
Hívja fel a legközelebbi Cascade Szervizrészleget. Keresse fel honlapunkat a www.cascorp.com címen
- (NO)** **Har du spørsmål du trenger svar på akkurat nå?** Kontakt den nærmeste Cascade-serviceavdelingen. Besøk oss på Internett under www.cascorp.com
- (PL)** **Czy potrzebne są teraz odpowiedzi na jakieś pytania?**
Prosimy skontaktować się telefonicznie z najbliższym Działem Serwisowym Cascade. Zapraszamy do naszej witryny internetowej pod adresem www.cascorp.com
- (SK)** **Máte nejaké otázky a potrebujete odpoveď ihneď?**
Zavolajte najbližšie servisné stredisko spoločnosti Cascade. Pozrite si naše internetové stránky www.cascorp.com

AMERICAS

**Cascade Corporation
U.S. Headquarters**
2201 NE 201st
Fairview, OR 97024-9718
Tel: 800-CASCADE (227-2233)
Fax: 888-329-8207

Cascade Canada Inc.
5570 Timberlea Blvd.
Mississauga, Ontario
Canada L4W-4M6
Tel: 905-629-7777
Fax: 905-629-7785

Cascade Brasil
Av. Casa Grande, 850
Casa Grande, Diadema SP,
09961-350
Tel: +55 11 4930-9800

Anval – Cascade Distributor
Av. El Ventisquero 1225, Bodega 99,
Renca – Santiago, Chile
8661516
Tel: +56 2 29516907

EUROPE-AFRICA

**Cascade Italia S.R.L.
European Headquarters**
Via Dell'Artigianato 1
37030 Vago di Lavagno (VR)
Italy
Tel: 39-045-8989111
Fax: 39-045-8989160

Cascade (Africa) Pty. Ltd.
PO Box 625, Isando 1600
60A Steel Road
Sparton, Kempton Park
South Africa
Tel: 27-11-975-9240
Fax: 27-11-394-1147

ASIA-PACIFIC

Cascade Japan Ltd.
2-23, 2-Chome,
Kukuchi Nishimachi
Amagasaki, Hyogo
Japan, 661-0978
Tel: 81-6-6420-9771
Fax: 81-6-6420-9777

Cascade Korea
121B 9L Namdong Ind.
Complex, 691-8 Gojan-Dong
Namdong-Ku
Inchon, Korea
Tel: +82-32-821-2051
Fax: +82-32-821-2055

Cascade-Xiamen
No. 668 Yangguang Rd.
Xinyang Industrial Zone
Haicang, Xiamen City
Fujian Province
P.R. China 361026
Tel: 86-592-651-2500
Fax: 86-592-651-2571

**Cascade India Material
Handling Pvt Ltd**
Gat. No. 319/1 & 319/2, Village Kuruli,
Taluka Khed, Pune 410 501
Maharashtra, India
Tel: +91 77200 25745

Cascade Australia Pty. Ltd.
36 Kiln Street
Darra QLD 4076
Australia
Tel: 1-800-227-223
Fax: +61 7 3373-7333

Cascade New Zealand
9 Blackburn Rd
East Tamaki, Auckland
New Zealand
Tel: +64-9-273-9136

**Sunstream Industries
Pte. Ltd. –
Cascade Distributor**
18 Tuas South Street 5
Singapore 637796
Tel: +65-6795-7555
Fax: +65-6863-1368

