




Installation Instruction


Carton Clamp Articulating Stabilizer Stop Kit 6985877

This sheet describes installing a stop kit to prevent the contact pads/stabilizer from articulating (pivoting). The kit includes shims and hardware. Drilling is required for this installation.


- 1 Locate and mark two hole centers on each stabilizer tab, in four locations, using the dimensions shown.
- 2 Drill and tap each M8 X 1.25 hole through the tab.
- 3 Install kit M8 x 16 mm capscrews in each drilled locations.

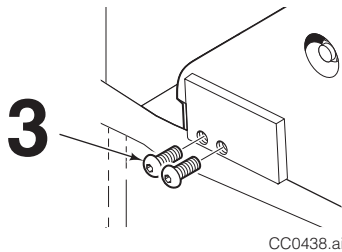

- 4 Position the contact pads to touch the kit capscrews.
- 5 Measure the opening width (OW) at the front and back of the contact pads, as shown.
 - If the front OW measurement is **less** than back OW measurement, install kit washer under the capscrew head.
 - If the front OW measurement is **greater** than back OW measurement, remove capscrews and install M8 x 20 mm capscrews.

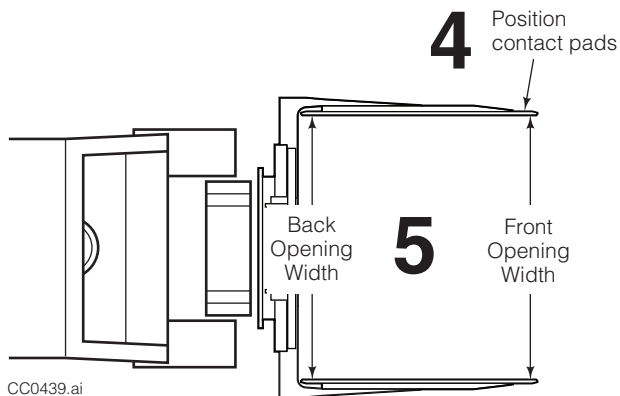

REF	DIMENSION
A	0.28 ±0.02 in. (7 ±0.5 mm)
B	0.75 ±0.02 in. (19 ±0.5 mm)
C	1.46 ±0.02 in. (37 ±0.5 mm)

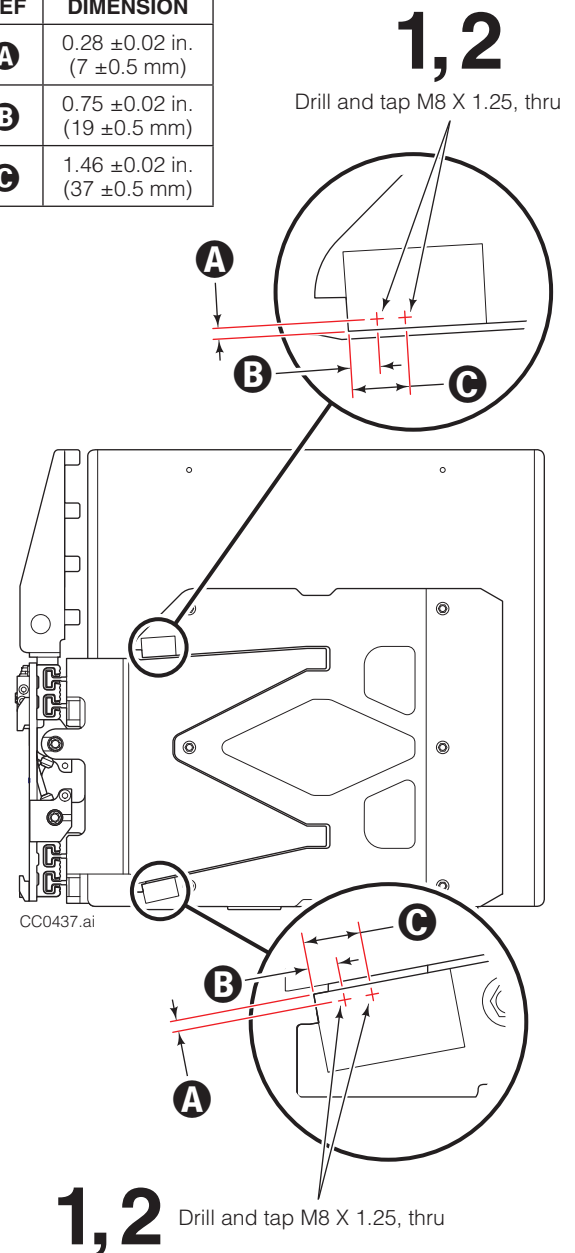

cascade®
corporation

For Technical Support . . .

Call: 1-800-227-2233 Fax: 1-888-329-8207
Internet: www.cascorp.com
Write: Cascade Corporation, PO Box 20187, Portland, OR 97294

To Order Parts . . .

Call: 1-888-227-2233 Fax: 1-888-329-0234
Internet: www.cascorp.com
Write: Cascade Corporation, 2501 Sheridan Ave., Springfield, OH 45505